Setup Icom IC 7200 RMS Trimode



Setup Icom IC 7200 RMS Trimode







Setup RMS Trimode - IC7200

				RMS Trimode - 1.3.2.0 - I2LLO				
File Stop S	ican l	Link Abort	Logs	Dial Freq: 7043,500 kHz	Center Freq: 7045,000 kHz Bytes/Min:			
Robust P	acket:			Rcvd: 0 Posted: 0 Sent: 0	Disabled			
F	actor:			Rcvd: 0 Posted: 0 Sent: 0	Blocked			
Winmo	r 1600:			Rcvd: 0 Posted: 0 Sent: 0	I2LLO listening for a Connection			
 HMS Trimode Secure Server Saved Solar fli TCP/IP Control Pactor Driver s Scanner start/ WINMOR Driv Scanning susp Holding scanner Active Pactor Active WINMO Scanning susp Holding scanner Holding scanner Active WINMO Scanning susp Holding scanner 	Is enabled Login is undex { login is und	to use RMS enabled, Auth SFI = 161 on not port open holding for TM holding for TM y sysop for Pactor te reported to V hels reported y sysop for WINMOF	a Relay. F henticatio 2014-11 to RMS I NC startup NC startup NC startup NL2K dar to WL2K R test signal NL2K dar to WL2K R test signal arà i finalo Ver ato il are	RMS Helay should be installed, on is automatic upon connectio -16 12:07 UTC} Relay on port 8510 o ta base 2014-11-16 12:12:24 data base 2014-11-16 12:12:2 nal	setup and running. n to CMS. L'IC7200 non dispone di presa Data Minidin, quindi sarà possibile usare Pactor e Winmor. Si vedrà qui la commutazione fra i due codici.			

Setup RMS Trimode - IC7200 - Registrazione



Setup RMS Trimode - IC7200 - Site Setup

	5		Site Settings		×		
Inserire qui il proprio locatore	Base Callsign: Default Service Code: Grid square (6 character):	I2LLO PUBLIC	TCP/IP Default Ses Default Max I	Timeout (seconds): ssion Timeout (min) Daily Usage (min)	10 30÷ 120÷		
	Save log files for 7	days E	Inhibit Autoup inable ADIF Log 🗌 E	date 🗌 Start M Enable RMS HF Analy	inimized		
	CMS 1 URL: CMS 2 URL:	brentwood.winlink.org halifax.winlink.org					
Abilitare questa opzione	CMS 3 URL: CMS 4 URL: CMS 5 URL:	perth.winlink.org sandiego.winlink.org wien.winlink.org					
	Enable TCP/IP Control (required for RMS Relay) TCP/IP Radio and Connection Control						
	Path to RMS Relay:	C:\RMS\RMS Relay\					
	TCP Command	d Port:	8510 Data	Port: 8511			
	RMS Trimode URL (host address)		ss): 127.0.0.1				
		host address			Port #		
	RMS Relay URL/Port:		127.0.0.1		8772		
Confermare qui			Update	(Close		

Setup RMS Trimode - IC7200 - Setup Frequenze



Setup RMS Trimode - IC7200 - Setup Radio



Setup RMS Trimode - IC7200 - Setup Winmor TNC



Setup RMS Trimode - IC7200 - Setup Pactor TNC



Nota Importante

Per poter utilizzare RMS Trimode è obbligatorio installare anche RMS Relay cui Trimode fa riferimento e ITSHFBC (reperibile sul sito <u>WWW.Winlink.org</u> richiede solo la installazione). La guide veloci per il setup dei software possono essere scaricate dal sito <u>WWW.arimagenta.it</u> nella pagina ARI-RE oppure dal sito del CRL nella pagina Winlink 2000.

Senza Relay non è possibile attivare il nodo, magari e soprattutto anche in abbinamento con RMS Packet. E' bene anche far partire per primo RMS Relay, quindi Trimode e infine RMS Packet.